

A--S3130T	FUJI SW, PHOTOELCTRIC PS49	A--S31208	FUJI MICRO SENSOR EE-SX772A (2M)	A--S31207	FUJI MICRO PHOTOELECTRIC SENSOR EE-SX771A (2M)	A--S3132H	FUJI PHOTO ELECTRIC SWITCH (PS-56R)
	K01		A13		A13		S29
A-S4040X	FUJI SENSOR, PHOTO	A-S4040Y	FUJI SENSOR	A--S4028T	FUJI SENSOR	A--S3128A	FUJI PHOTOELECTRIC SWITCH
			S29		S29		S29
A--S4052A	FIBER SENSOR	A--FU-65FA	SENSOR	A--S4052T	TAKEX FIBER SENSOR (F-9573-1)	A--S4046E	OMRON SENSOR
					S29		S29